

APPLICATION

For mounting fiberglass and mineral board acoustical wall panels with kerfed edges and splines.

DESCRIPTION


Note:

- Use clean hands when handling panels and be sure the installation area is cleaned and prepped.

This installation technique uses J-Molding horizontally along the top and bottom of panels and splines between the panels. Installation is done in the following order:

1. Measure the length of the wall to be covered and mark the locations of J-molding.
2. Install top and bottom J-Molds per marked location on the wall.
3. Slide panel into J-Molds and insert short end of spline into panel then secure spline to wall.
4. Repeat until all panels installed.

Section View

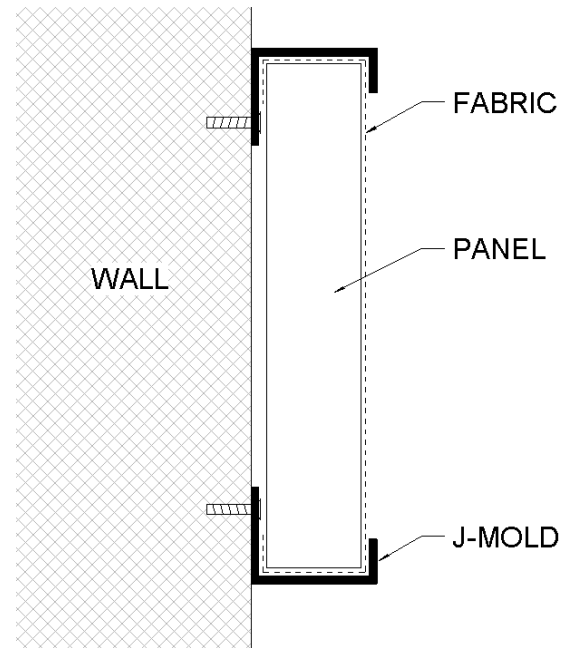

Plan View

